


tasman[®]

ESSENTIALS


Chest top changer

Assembly Instructions

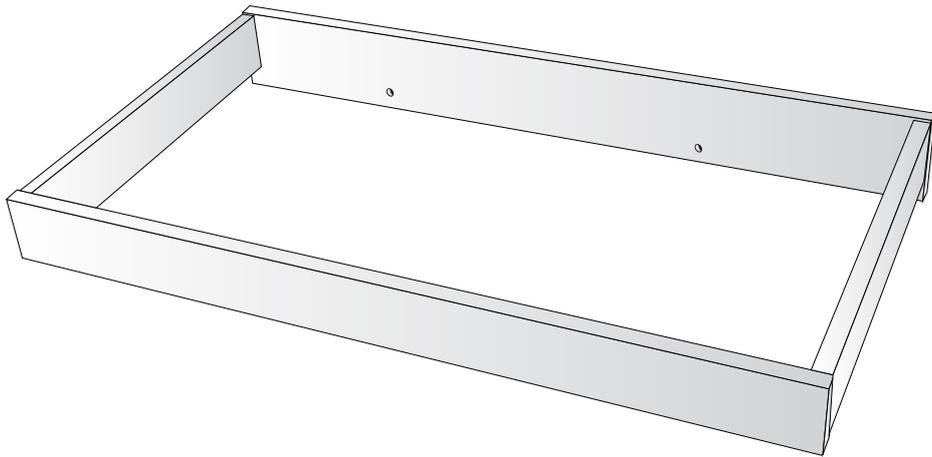


Parts Checklist


Rear panel x 1

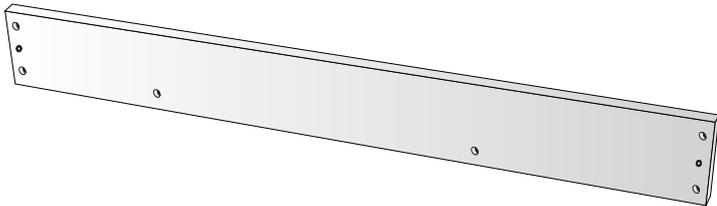

Front panel x 1

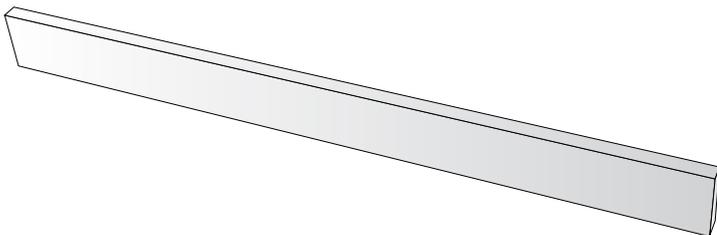

Side panels x 2

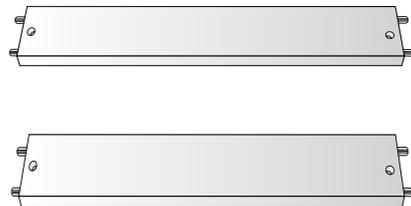

Locking cams x 4



Self tapping screw x 2



Locking pins x 4





Packaging and instructions
printed on recycled materials

tasman[®]
ESSENTIALS

Tasman Eco Furniture Pty Ltd abn. 58 106 988 578
4-6 Merryvale Rd, Minto, NSW 2566 p.o. box 5878 Minto DC, NSW 2566
t. 02 9603 5000 f. 02 9603 7000 e. info@tasmaneco.com.au w. www.tasmaneco.com.au

1 Fit locking pins to front and back panels

- Lay the front and back panels face down on the floor and scw in x 4 locking pins
- Front panel - Screw x 2 locking pins into threaded holes, 1 at each end
- Back panel - Screw x 2 locking pins into threaded holes, 1 at each end
- Tighten all locking pins firmly with a screwdriver

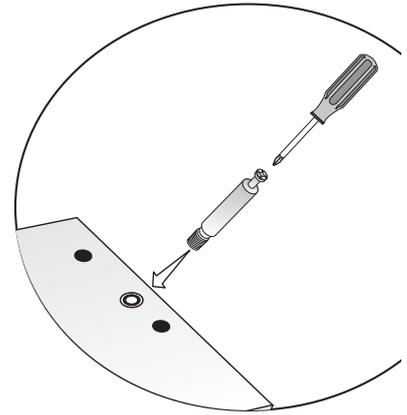
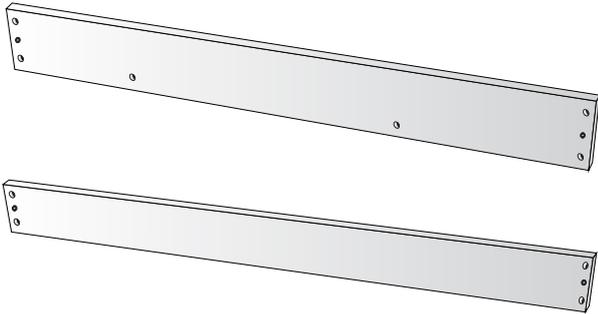


2 Fit locking cams to side panels.

- Push each cam all the way into the hole. Use a screwdriver to rotate the locking cams so the pointed end of the cross on the cam points in the direction locking pins will insert from.
- Side panels - Insert x 2 cam locks into each side panel and rotate to the correct position

Note the pointed end of the cross on the cam locks must point in the direction the locking pins will be inserted from

Repeat for each side panel

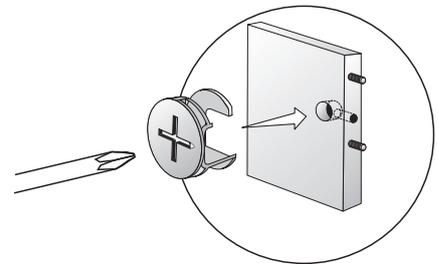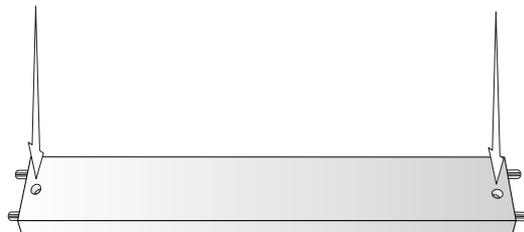


Use a screwdriver to rotate cam into correct alignment.

3 Fit x 2 side panels to back panel

Fit the x 2 side panels to the back panel


- insert the locking pin on the back panel into the hole on the side panel and the dowels into the holes on the back panel
- Turn the cam lock with a screwdriver to lock into place
- Repeat so both side panels are attached to the back panel

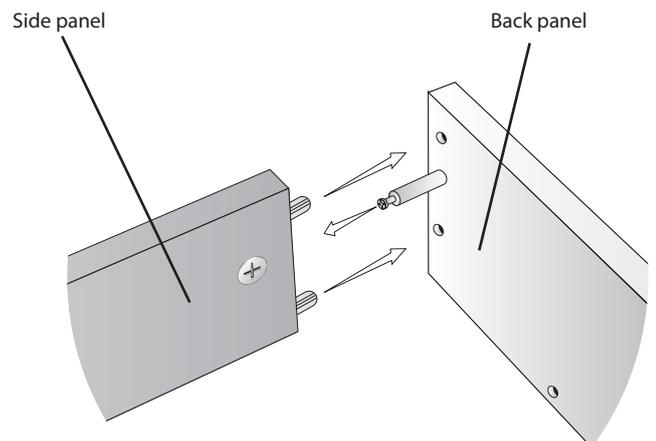

4 Fit front panel to side and back panel

it is the same process as fitting the back panel


- insert the locking pins on the front panel into the holes on the side panels and the dowels into holes on the front panel
- Turn the cam locks with a screwdriver to lock into place
- Repeat so front panel is attached on both sides

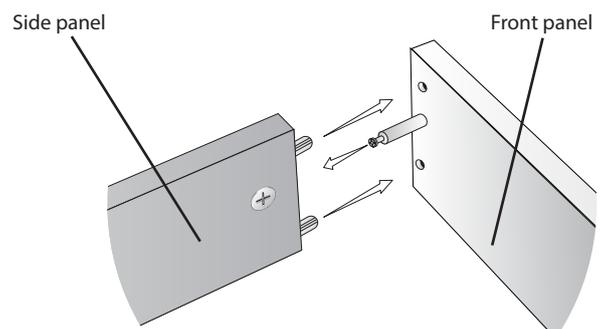

5

Attach chest top changer to chest of drawers

- Place chest top changer onto the top of Essentials four drawer chest
- Align carefully so chest top changer is in the center of the chest
- Insert x 2 self tapping screws through holes in chest top changer and using a screwdriver screw into the back of the chest of drawers.
- The Essentials chest top changer fits a change mattress 80 cm x 42 cm +/- 2 cm

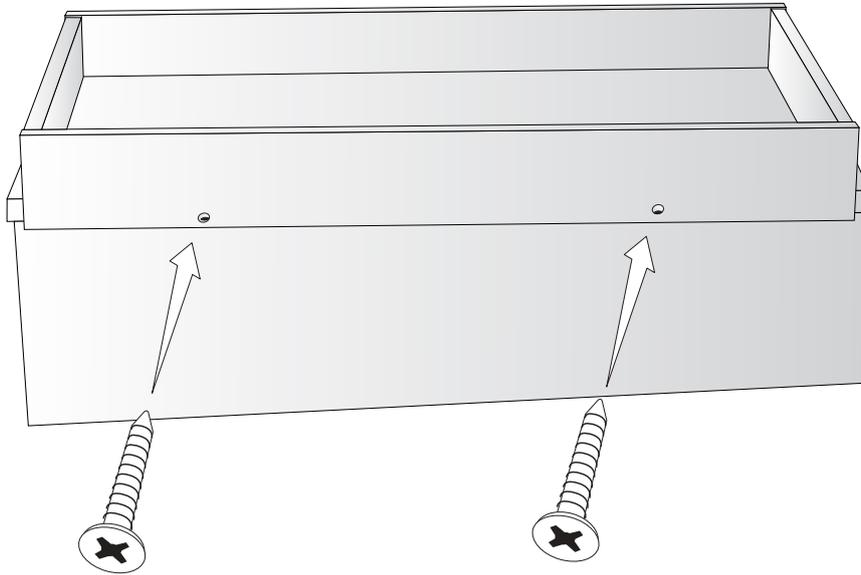

The Tasman Essentials Guarantee

100% Satisfaction Guarantee

If, within 3 months of the date of purchase of this product, the purchaser is not completely satisfied with this product for any reason, subject only to the conditions below, the purchaser can return the product to the place of purchase or to SJC Brands Pty Ltd for a refund of the full purchase price of this product.

Conditions.

The 100% Satisfaction Guarantee is void and nullified in circumstances where:

1. There are modifications to the product or to parts of the product that were not authorised in writing by SJC Brands Pty Ltd.
2. There is damage to the product and that damage is deemed by SJC Brands Pty Ltd to be caused by incorrect assembly, misuse or by use or storage outside of the physical or environmental specifications of the product.

5 Year Materials and Workmanship Guarantee

If within 5 years of the date of purchase of this product, there is found any defect in materials or workmanship of this product, SJC Brands Pty Ltd, will replace the product free of charge, subject to the conditions below. The replacement product will be identical to the originally purchased product wherever possible, though in situations where the identical model is discontinued or out of stock, then SJC Brands Pty Ltd will replace the product with a model that is functionally equivalent.

This Guarantee is made to the purchaser and/or original owner only. For purposes of this Guarantee, the original owner is considered to be the person who first makes use of the product. Note: In situations where a person purchases this product for the purpose of gifting to another, the recipient is considered to be the original owner.

Conditions.

The '5 Year Materials and Workmanship Guarantee' will be void and nullified in circumstances where:

1. The item is improperly assembled or adjusted and or not assembled strictly in accordance with the written instructions provided by the seller in the box containing the item.
2. There is damage to the product and that damage is deemed by SJC Brands Pty Ltd to be caused by incorrect assembly, misuse or by use or storage outside of the physical or environmental specifications of the product.
3. There are modifications to the product or to parts of the product that were not authorised in writing by SJC Brands Pty Ltd.
4. The item is transferred, gifted or disposed of by the original owner to another.

Registration and Claims

To be eligible for the above Guarantees, the original owner must register their details online at www.tasmaneco.com.au immediately upon receipt of the product.

For claims under either the 100% Satisfaction Guarantee or the 5 year Materials and Workmanship Guarantee, please email us via our claims section on our website at www.tasmaneco.com.au or visit the store where the product was purchased.

The product must be returned to SJC Brands Pty Ltd or to the place of purchase with proof of purchase, including date and purchase price.